



## FENDER SKIRT SCUFF PADS & PARTS –CHEVY

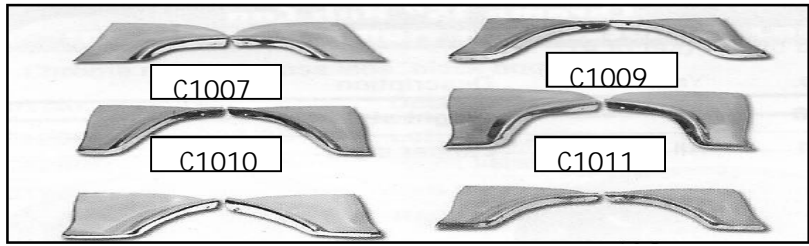

C1006	1955 SCUFF PADS	PR
C1007	1956 SCUFF PADS	PR
C1001	1957 SCUFF PADS	PR
C1008	1958 SCUFF PADS	PR
C1009	1959 SCUFF PADS	PR
C1010	1960 SCUFF PADS	PR
C1011	1961 SCUFF PADS	PR
C1002	1962 SCUFF PADS	PR
C1003	1963 SCUFF PADS	PR
C1004	1964 SCUFF PADS	PR
C1005	1965-66 SCUFF PADS	PR

## FENDER SKIRT HARDWARE– CHEVY

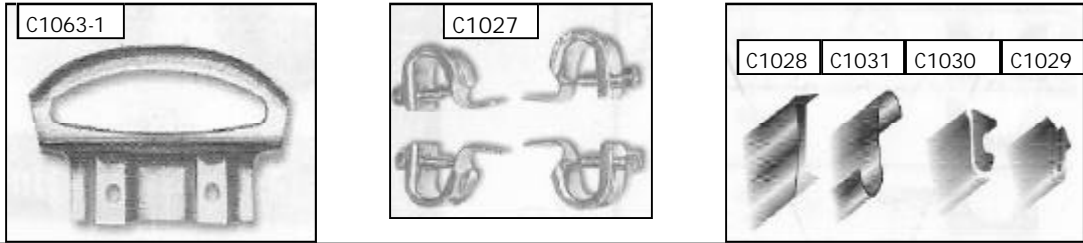

C1029	1941-48 SKIRT RUBBER (ONE PAIR SKIRTS)	EA
C1056-1	1942-48 SKIRT FLEETLINE STRIPS ONLY	SET 6
C1063-1	1949- 54 SKIRT CLIPS SET/4 PCS	SET
C1031	1949-54 FENDER SKIRT RUBBER (ONE PAIR)	EA
C1027	1955-66 SKIRT CLIPS (ONE PAIR OF SKIRTS)	SET
C1028	1955-66 SKIRT RUBBER (ONE PAIR SKIRTS)	EA
C1030	1941-48 GM,PONT.,BUICK ,OLDS SKIRT RUBBER	EA

## FORD FENDER SKIRTS & SCUFF PADS

KA8312	1952-54 FORD & MERC FNDR SKIRT	PR
A4055	1949-51 FORD SKIRTS	PR
A4058	1955-56 FORD SKIRTS	PR
A4056	1957-58 FORD SKIRTS	PR
C1013	1955-56 FORD SCUFF PADS	PR
C1012	1957-58 FORD SCUFF PADS	PR